

Thank you for your purchase of this Citizen watch.

Before using the watch, read this instruction manual carefully to ensure correct use.

After reading the manual, store it in a safe place for future reference.


Be sure to visit the Citizen website at <https://www.citizenwatch-global.com/> . Some models may be equipped with enhanced features and functions such as slide rules and tachymeters. You can also see how to use such features and functions, which is not covered with the instruction manual, in the web site.

To check the movement number

A case number—4 alphanumeric characters and 6 or more alphanumeric characters—is engraved on the case back. (Figure on the right)

The first 4 characters of the case number represent the movement number of the watch. In the example on the right, “△△△△” is the movement number.

Engraving position example






The engraving position may differ depending on watch model.



Safety precautions — IMPORTANT

This manual contains instructions that should be strictly followed at all times not only for optimal use, but to prevent any injuries to yourself, other persons or property. We encourage you to read the entire booklet (especially, pages **20 - 31**) and understand the meaning of the following symbols:

- Safety advisories are categorized and depicted in this manual as follows:

 DANGER	Highly likely to cause death or serious injury
 WARNING	Can cause serious injury or death
 CAUTION	Can or will cause minor or moderate injury or damage

- Important instructions are categorized and depicted in this manual as follows:
(Following symbols are examples of Pictograms.)

	Warning (caution) symbol followed by prohibited matters.
	Warning (caution) symbol followed by instructions that should be followed or precautions that should be observed.

CONTENTS

Before using this watch.....	6
Band adjustment.....	6
Protective stickers.....	6
How to use a specially designed crown/button.....	7
Component identification.....	9

Adjusting the time and calendar	12
Using the chronograph	14
Water resistance	18
Precautionary items and usage limitations	20
Specifications	32

Before using this watch

Band adjustment

We recommend seeking the assistance of an experienced watch technician for sizing of your watch. If adjustment is not done correctly, the bracelet may unexpectedly become detached leading to loss of your watch or injury (excluding products containing the band adjustment tool).

Consult an authorized service center.

Protective stickers





Be sure to remove any protective stickers that may be on your watch (case back, band, clasp, etc.). Otherwise, perspiration or moisture may enter the gaps between the protective stickers and the parts, which may result in a skin rash and/or corrosion of the metal parts.

How to use a specially designed crown/button

Some models are equipped with a specially designed crown and/or push button to prevent accidental operation.


Screw down crown/button

Unlock the crown/button prior to operate your watch.

	Unlock	Lock
Screw down crown	 <p>Rotate the crown counterclockwise until it releases from the case.</p>	 <p>Push the crown in to the case. With gentle pressure towards the case, rotate the crown clockwise to secure it to the case. Be sure to tighten firmly.</p>
Screw down push button	 <p>Rotate the locking screw counterclockwise, and loosen until it stops.</p>	 <p>Rotate the locking screw clockwise, and tighten firmly.</p>

Recessed button


Press the button with a non-marring narrow-tipped object.



- Metal objects may cause marring or scratching of the button.


Component identification

[6520]

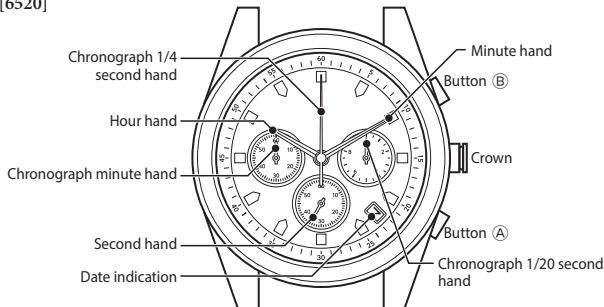


- Actual appearance may differ from the illustrations.

[6521]

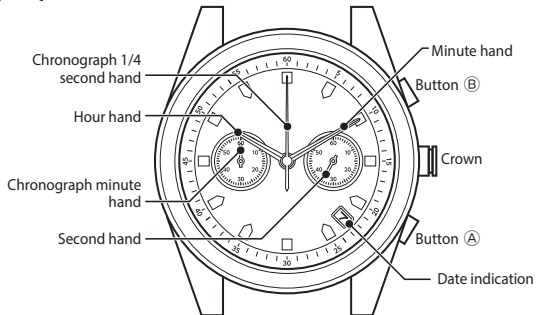

- Actual appearance may differ from the illustrations.


[6550]

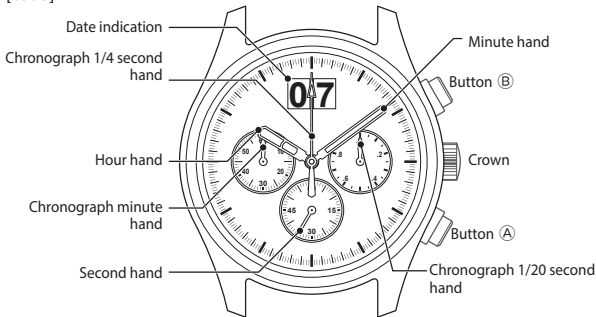

- Actual appearance may differ from the illustrations.

Adjusting the time and calendar

Setting the time

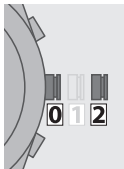

- 1 Pull the crown out to position 2 when the small second hand points 0 second.**
All the hands stop.
- 2 Rotate the crown to set the time.**
 - Take care the time set is AM or PM. Change of date indication shows it just became AM.
 - Date indication does not change while moving the hands counterclockwise.
- 3 Push the crown in to position 0 in accordance with a reliable time source to finish the procedure.**

Adjusting the calendar

Date indication adjustment is required on the first days of March, May, July, October and December.


- Do not adjust date indication while the watch shows 11:00 pm - 3:00 am. Otherwise the date indication may change improperly.



- 1 Pull the crown out to position 1.**
- 2 Rotate the crown clockwise to set the date.**
- 3 Push the crown in to position 0 to finish the procedure.**

Using the chronograph

Chronograph measurement

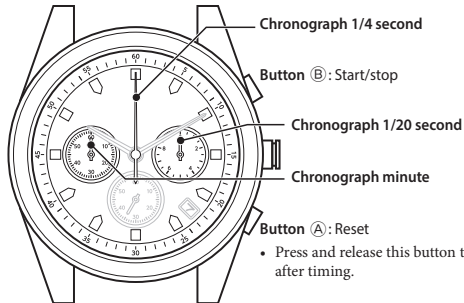


- Press and release this button to reset the chronograph after timing.

- Illustration of 6520 is used for explanation here.

- Models equipped with the chronograph 1/20 and 1/4 second hands can measure up to 59 minutes 59.95 seconds by 1/20 seconds. Models equipped with the chronograph 1/4 second hand can measure up to 59 minutes 59.75 seconds by 1/4 seconds.
- Pulling out the crown will stop and reset the chronograph.
- After one hour of continuous chronograph operation, the chronograph automatically stops.
- The chronograph 1/20 second hand will stop at the 0-second position after 30 seconds since measurement started but measurement continues. After that, chronograph 1/20 seconds are indicated only when the chronograph is stopped.
- The time is indicated normally even while using the chronograph.

■ Adjusting the position of the chronograph 1/4 and 1/20 second hands

When the chronograph 1/4 second hand and/or chronograph 1/20 second hand do not return the 0-second position after resetting, adjust their positions.

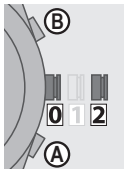

1 Pull the crown out to position 2.


All the hands stop.

- Adjust the time after finishing the hand adjustment.

2 Press and release the upper right button (B) or the lower right button (A) to adjust the positions of the chronograph 1/4 and 1/20 second hands to 0 seconds.

Button (A): Chronograph 1/20 second hand

Button (B): Chronograph 1/4 second hand

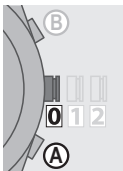

- Each time you press the button, the hand moves by 1 step.
- The hand moves continuously while you are pressing and holding the button.

3 Push the crown in to position 0.

4 Press and release the lower right button (A) to finish the procedure.

Water resistance









WARNING

Water resistance

- Refer to the watch dial and/or the case back for the indication of the water resistance of your watch. The following chart provides examples of use for reference to ensure that your watch is used properly. (The unit “1bar” is roughly equal to 1 atmosphere.)
- “WATER RESIST(ANT) ××bar” may also be indicated as “W.R.××bar”.
- Non-water resistant models are not designed to come into contact with any moisture. Take care not to expose a watch with this rating to any type of moisture.
- Water resistance for daily use (to 3 atmospheres) means the watch is water resistant for occasional accidental splashing.

Name	Indication	Specification
	Dial or Case back	
Non-water resistant	—	Non-water resistant
Everyday-use water resistant watch	WATER RESIST	Water-resistant to 3 atmospheres
Upgraded everyday use water resistant watch	W. R. 5 bar	Water-resistant to 5 atmospheres
	W. R. 10/20 bar	Water-resistant to 10 and 20 atmospheres

- Upgraded water-resistance for daily use (to 5 atmospheres) means that the watch may be worn while swimming, but is not to worn while skin diving.
- Upgraded water-resistance for daily use (to 10/20 atmospheres) means that the watch may be worn while skin diving, but not while scuba or saturated diving using helium gas.

Water-related use						
						
Minor exposure to water (washing face, rain, etc.)	Swimming and general washing work	Skin diving, marine sports	Scuba diving using an air tank	Saturation diving using helium gas	Operate the crown or button when the watch is wet	
NO	NO	NO	NO	NO	NO	
OK	NO	NO	NO	NO	NO	
OK	OK	NO	NO	NO	NO	
OK	OK	OK	NO	NO	NO	

Precautionary items and usage limitations



CAUTION

Battery replacement

- Do not recharge the used battery.
- Do not throw the used battery into the fire.
- Keep the battery out of the reach of small children.
- If the battery is accidentally swallowed, consult a doctor immediately.
- Do not disassemble, customize or heat the battery. It may result in a serious accident.
- Leaving a used battery in the watch may damage it through leakage and result in malfunction. Replace the battery soon.
- When replacing the battery, always make sure to use the designated one.



CAUTION

To Avoid Injury

- Be particularly careful when wearing your watch while holding a small child, to avoid injury.
- Be particularly careful when engaged in strenuous exercise or work, to avoid injury to yourself and others.
- Do NOT wear your watch while in a sauna or other location where your watch may become excessively hot, since there is the risk of burns.
- Be careful when putting on and taking off your watch, since there is a risk of damaging your fingernails, depending on the manner in which the band is fastened.



CAUTION

Precautions

- Always use the watch with the crown pushed in (normal position). If the crown is of the screw lock-type, make sure it is securely locked.
- Do NOT operate the crown or any push buttons when the watch is wet. Water may enter the watch causing damage to vital components.
- If water enters the watch or the watch fogs up and does not clear up even after a long time, consult your dealer or an authorized service center for inspection and/or repair.
- Even if your watch has a high level of water resistance, please be careful of the following.
 - If your watch is immersed in sea water, rinse thoroughly with fresh water and wipe with a dry cloth.
 - Do not pour water from a tap directly onto your watch.
 - Take off your watch before taking a bath.

- If seawater enters the watch, place the watch in a box or plastic bag and immediately take it in for repair.
Otherwise, pressure inside the watch will increase, and parts (crystal, crown, push button, etc.) may come off.



CAUTION

When Wearing Your Watch

<Band>

- Leather bands and rubber (urethane) bands will deteriorate over time due to perspiration or dirt. In addition, they are made of natural material and will be worn, deformed and discolored over time. It is recommended to replace the band periodically.
- The durability of a leather band may be affected when wet (fading, peeling of adhesive), owing to the properties of the material. Moreover, wet leather may cause a rash.
- Do not stain a leather band with substances containing volatile materials, bleach, alcohol (including cosmetics). Discoloration and premature aging may be occurred. Ultraviolet light such as direct sunlight may cause discoloration or deformation.
- It is recommended to take off the watch if it gets wet, even if the watch itself is water-resistant.

- Do not wear the band too tightly. Try to leave enough space between the band and your skin to allow adequate ventilation.
- The rubber (urethane) band may be stained by dyes or soil present in or on clothing or other accessories. Since these stains may not be removable, caution is required when wearing your watch with items that tend to easily transfer color (articles of clothing, purses, etc.). In addition, the band may be deteriorated by solvents or moisture in the air. Replace with a new one when it has lost elasticity or become cracked.
- Please request adjustment or repair of the band in the following cases:
 - You notice an abnormality with the band due to corrosion.
 - The pin of the band is protruding.
- We recommend seeking the assistance of an experienced watch technician for sizing of your watch. If adjustment is not done correctly, the bracelet may unexpectedly become detached leading to loss of your watch or injury (excluding products containing the band adjustment tool).
Consult an authorized service center.

<Temperature>

- The watch may stop or the function of the watch may be impaired in extremely high or low temperature. Do not use the watch in places where the temperature is outside the operating temperature range as stated in the specifications.

<Magnetism>

- Analog quartz watches are powered by a step motor that uses a magnet. Subjecting the watch to strong magnetism from the outside can cause the motor to operate improperly and prevent the watch from keeping time accurately. Do not allow the watch to come into close proximity to magnetic health devices (magnetic necklaces, magnetic elastic bands, etc.) or the magnets used in the latches of refrigerator doors, clasps used in handbags, the speaker of a cell phone, electromagnetic cooking devices and so on.

<Strong Shock>

- Avoid dropping the watch or subjecting it to other strong impact. It may cause malfunctions and/or performance deterioration as well as damage to the case and bracelet.

<Static Electricity>

- The integrated circuits (IC) used in quartz watches are sensitive to static electricity. Please note the watch may operate erratically or not at all if exposed to intense static electricity.

<Chemicals, Corrosive Gasses and Mercury>

- Do not use the watch in environment with chemicals or corrosive gasses. If paint thinner, benzene or other solvents or products containing these solvents (including gasoline, nail-polish remover, cresol, bathroom cleaners and adhesives, water repellent, etc.) are allowed to come into contact with the watch, they may discolor, dissolve or crack the materials. Be careful when handling these chemicals. Contact with mercury such as that used in thermometers may also cause discoloration of the band and case.

<Protective Stickers>

- Be sure to remove any protective stickers that may be on your watch (case back, band, clasp, etc.). Otherwise, perspiration or moisture may enter the gaps between the protective stickers and the parts, which may result in a skin rash and/or corrosion of the metal parts.



CAUTION

Always Keep Your Watch Clean

- Rotate the crown while it is pressed in fully and press the buttons periodically so they do not become stuck due to accumulations of foreign matter.
- The case and band of the watch come into direct contact with the skin. Corrosion of the metal or accumulated foreign matter may result in black residue coming from the bracelet when exposed to moisture or perspiration unnoticed soiling such as that caused by perspiration. Be sure to keep your watch clean at all times.
- The case and band of the watch come into direct contact with the skin. In rare circumstances, accumulated dirt, foreign matter may cause irritation with the skin. If you think there is something wrong, discontinue wearing the watch immediately and consult your physician.

- In the case of accumulation of sweat or dirt on a metal band or case, clean thoroughly using a brush and neutral detergent. In the case of a leather or rubber (urethane) band, wipe clean using a dry cloth.
- Leather bands may become discolored by perspiration or dirt. Always keep your leather band clean by wiping with a dry cloth.

Caring for Your Watch

- Wipe any dirt or moisture such as perspiration from the case and crystal with a soft cloth.
- For a metallic, plastic or rubber (urethane) watchband, wash any dirt off with water. Remove the small amounts of dirt trapped between the crevices of the metallic band with a soft brush.
- For a leather band, wipe off dirt using a dry cloth.
- If you will not be using your watch for an extended period of time, carefully wipe off any perspiration, dirt or moisture and store in a proper location, avoiding locations subject to excessively high or low temperatures and high humidity.

When Luminous Paint is used for your watch

The paint on the dial and hands helps you with reading the time in a dark place. The luminous paint stores light (daylight or artificial light) and glows in a dark place. It is free from any radioactive substance or any other material harmful to a human body or environment.

- The light emission gradually becomes weaker as time passes.
- The duration of the light (“glow”) will vary depending on the brightness, types of and distance from a light source, exposure time, and the amount of the paint.
- The paint may not glow and/or may dissipate quickly if exposure to light was not sufficient.

Specifications

Model	65**	Type	Analog quartz watch
Timekeeping accuracy	Average monthly accuracy: ± 20 seconds when worn at normal operation temperatures between +5°C (41°F) and +35°C (95°F)		
Operating temperature range	-10°C (14°F) - +60°C (140°F)		
Display functions	<ul style="list-style-type: none">• Time: Hours, minutes, seconds• Calendar: Date		
Battery	SR927W		
Battery life	About 4 years (when using the chronograph for 1 hour a day)		

Additional functions

- Chronograph (up to 60minutes in 1/20- or 1/4-second increments)

* Specifications and contents of this booklet are subject to change without prior notice.